

138-6000 MHz Ultra Wide Band OMNI Directional Antenna



MA-WO-UWB

Radiations Patterns

Frequency 150 MHz Gain, typ. 3 dBi

E-Plane Patterns

H-Plane Patterns

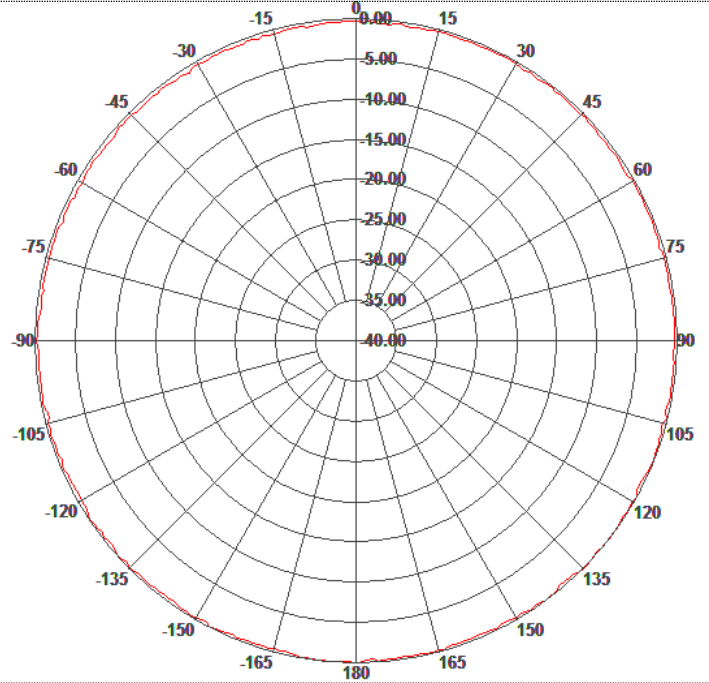
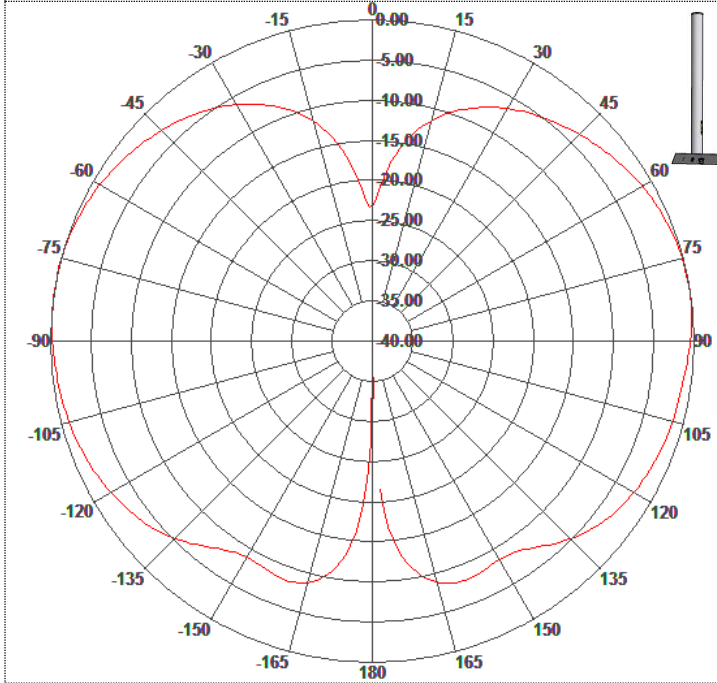


Radiations Patterns

Frequency 406 MHz Gain, typ. 4 dBi

E-Plane Pattern


H-Plane Pattern

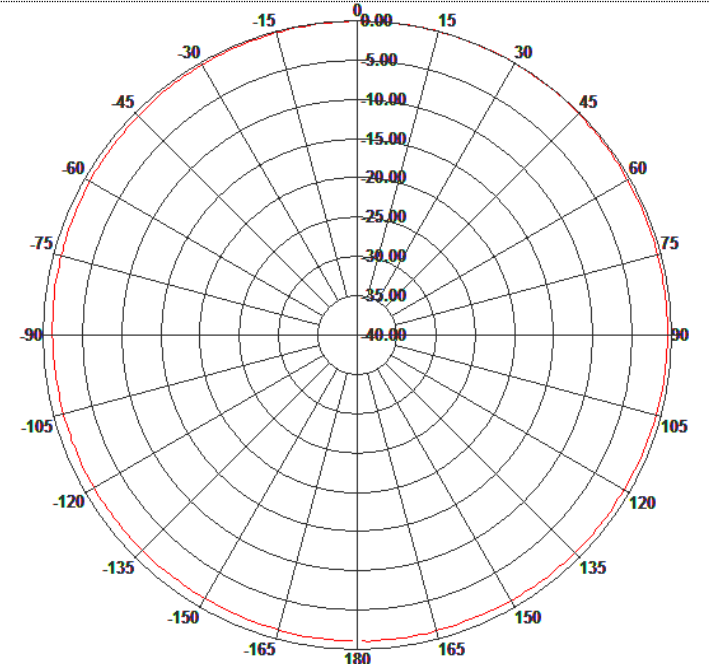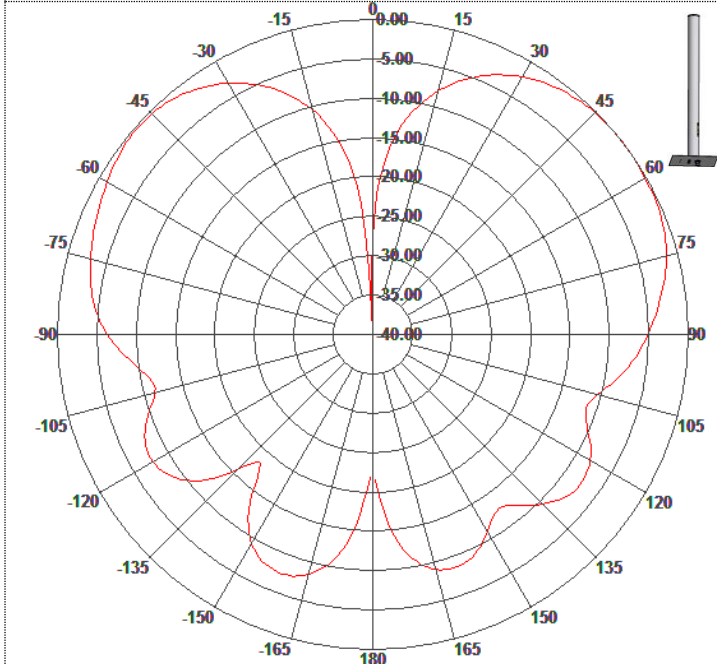


Radiations Patterns

Frequency 450 MHz Gain, typ. 5 dBi

E-Plane Patterns

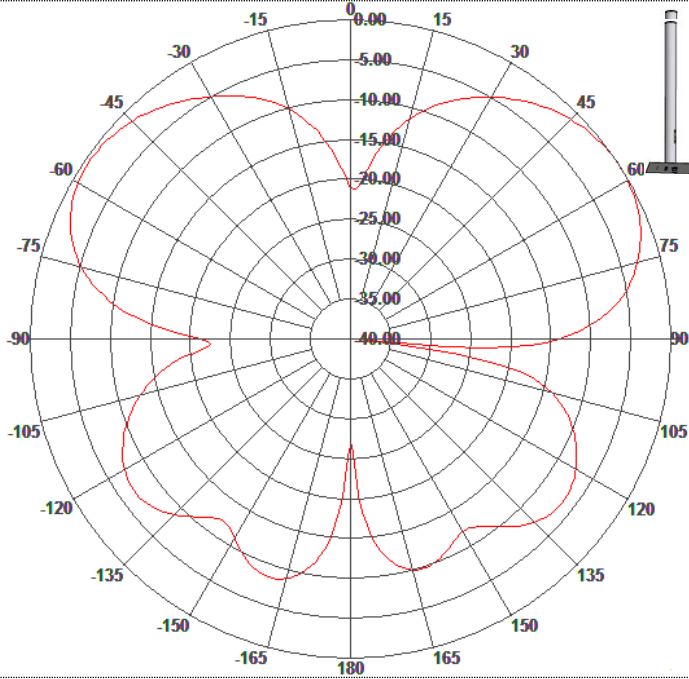


H-Plane Patterns

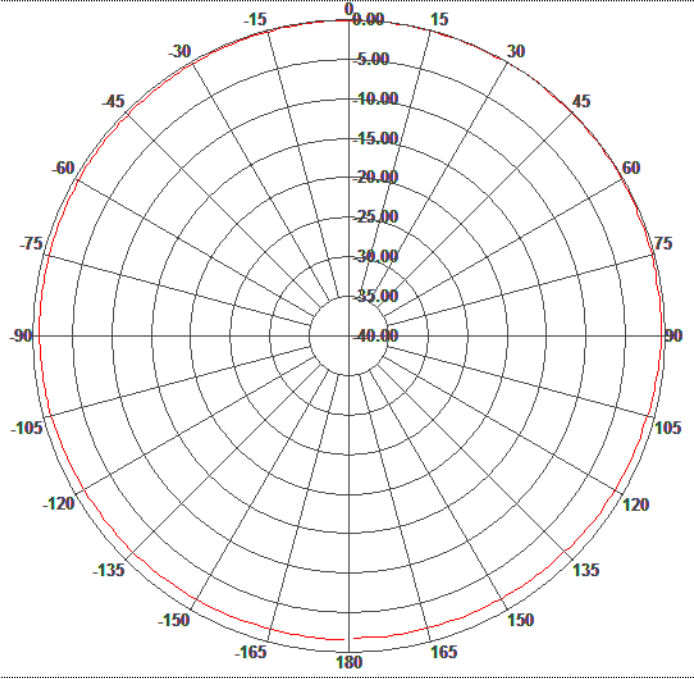


Radiations Patterns

Frequency 698 MHz Gain, typ. 6 dBi

E-Plane Pattern

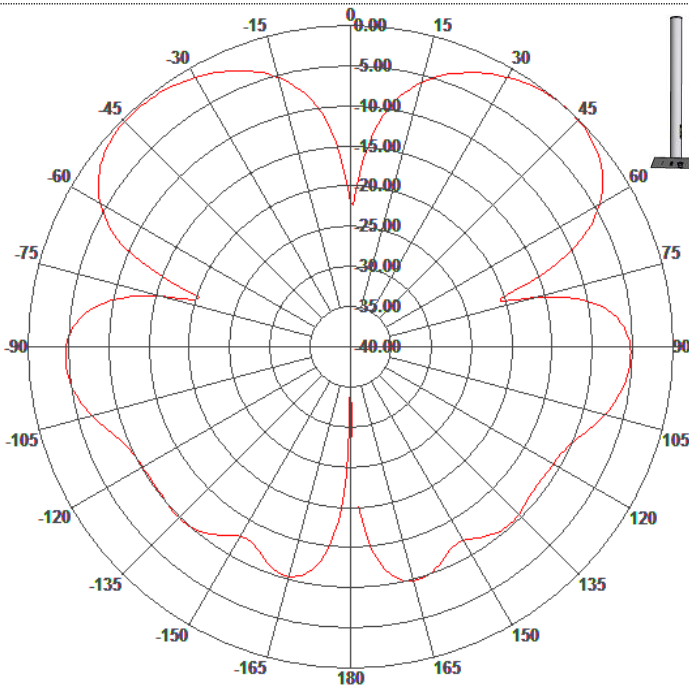

H-Plane Pattern


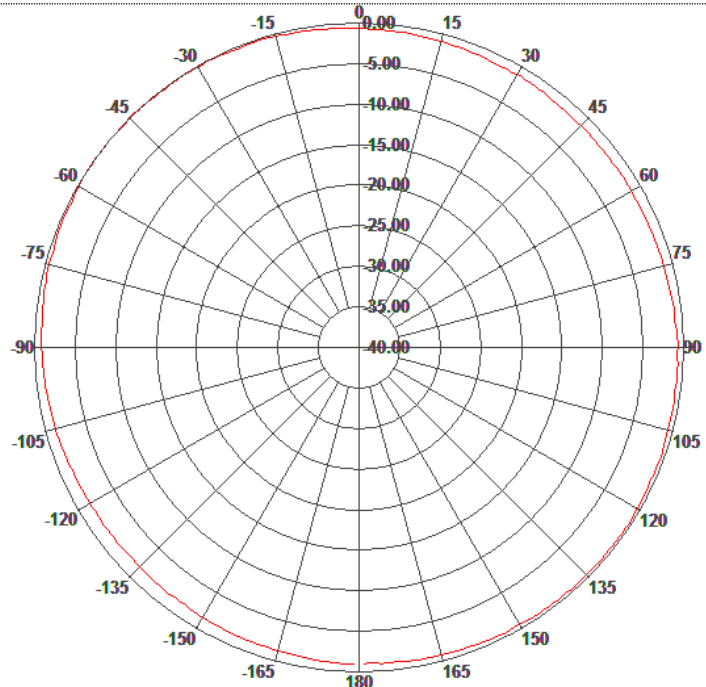


Radiations Patterns

Frequency 750 MHz Gain, typ. 7 dBi

E-Plane Patterns

H-Plane Patterns

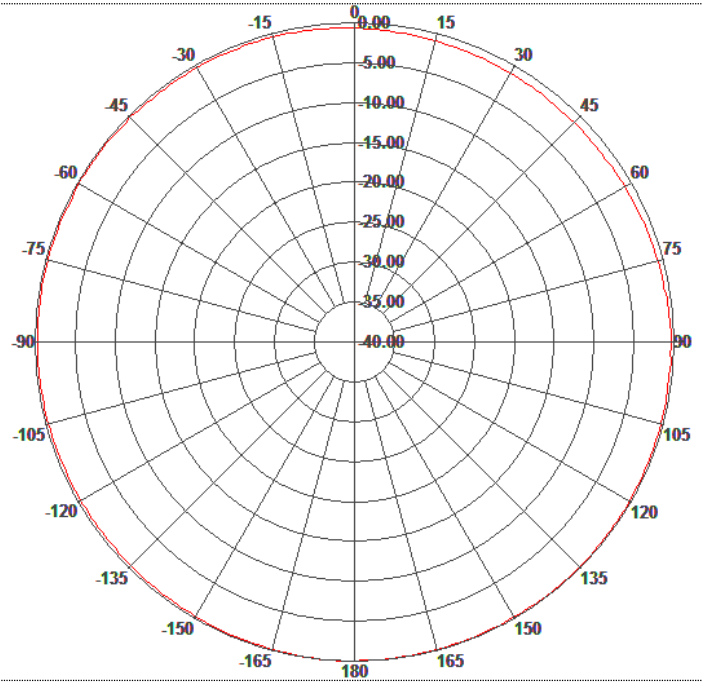
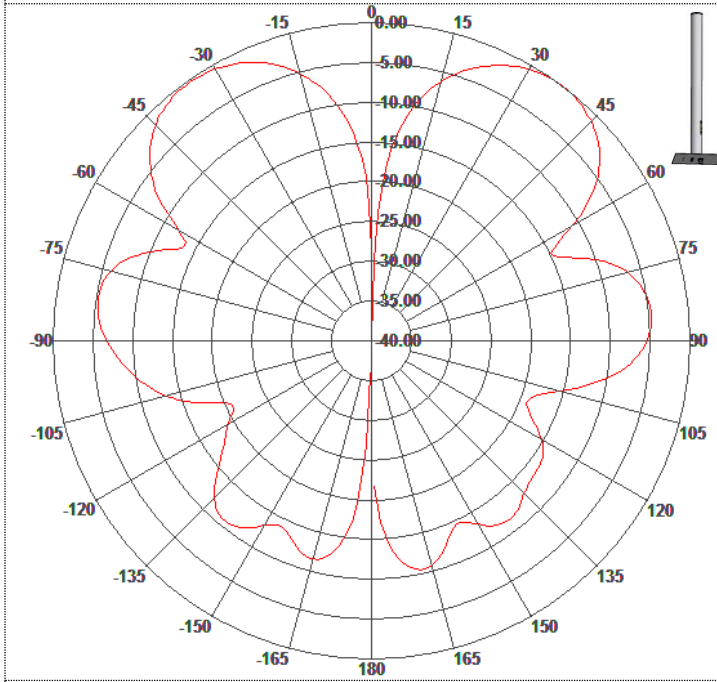


Radiations Patterns

Frequency 900 MHz Gain, typ. 7 dBi

E-Plane Pattern

H-Plane Pattern

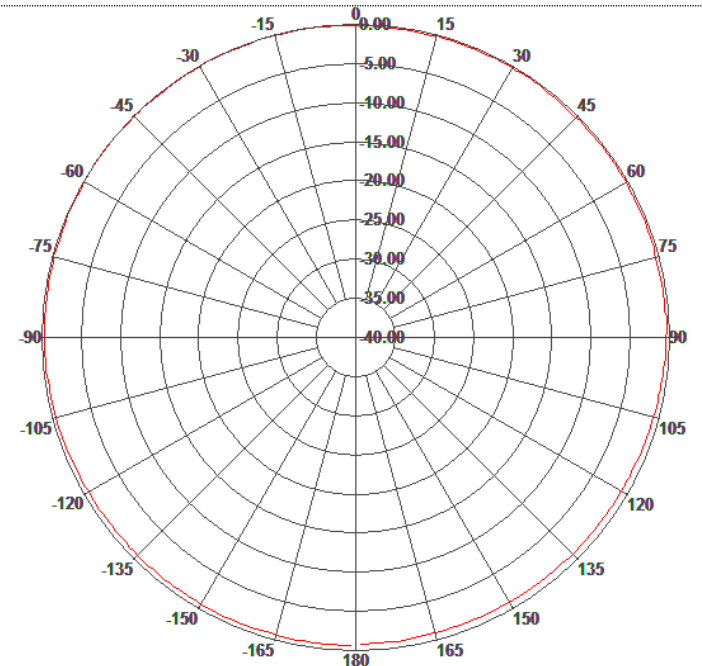
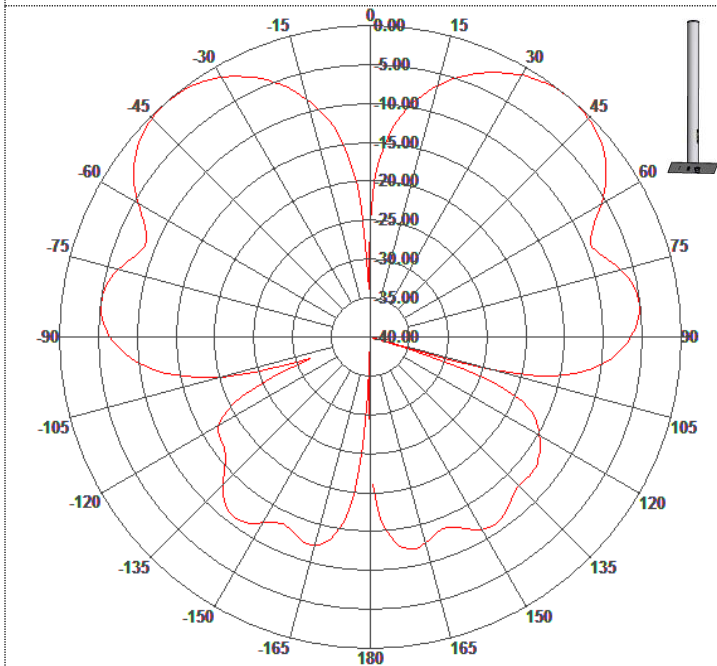


Radiations Patterns

Frequency 1700 MHz Gain, typ. 8 dBi

E-Plane Patterns

H-Plane Patterns

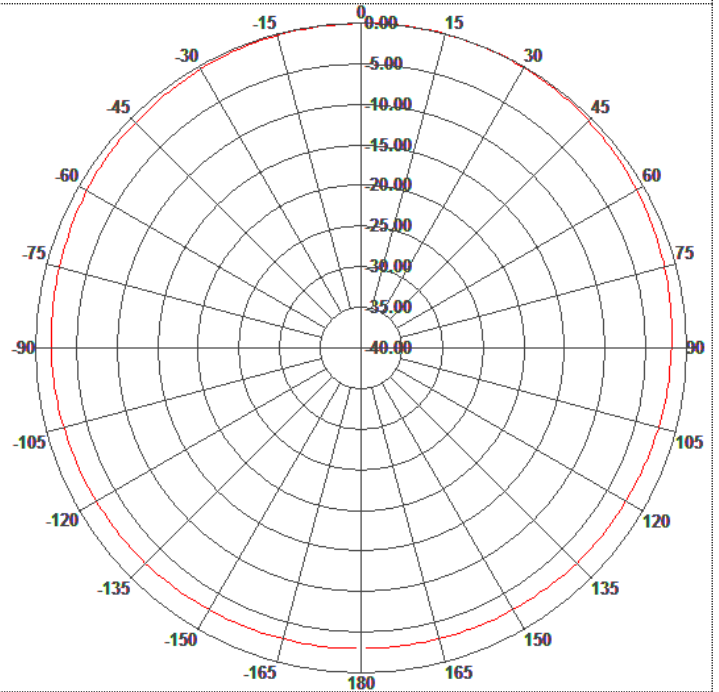
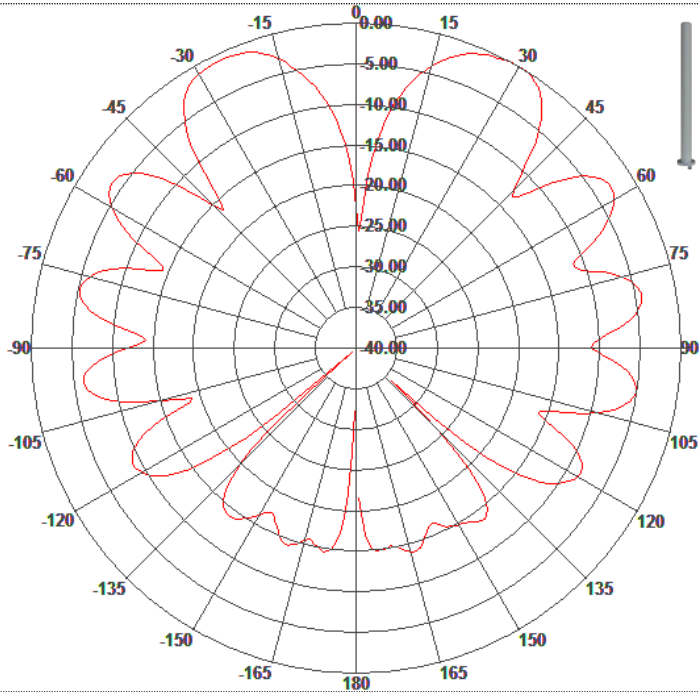


Radiations Patterns

Frequency 2500 MHz Gain, typ. 8 dBi

E-Plane Pattern

H-Plane Pattern

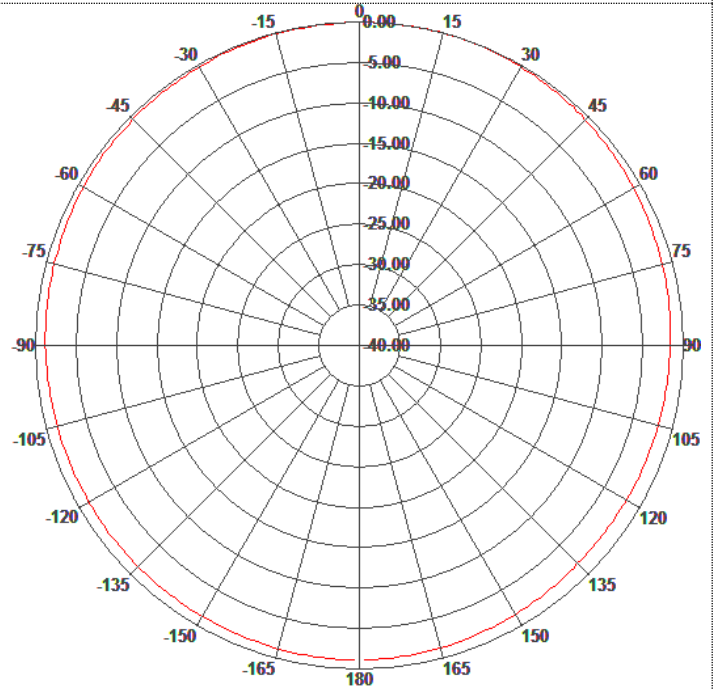
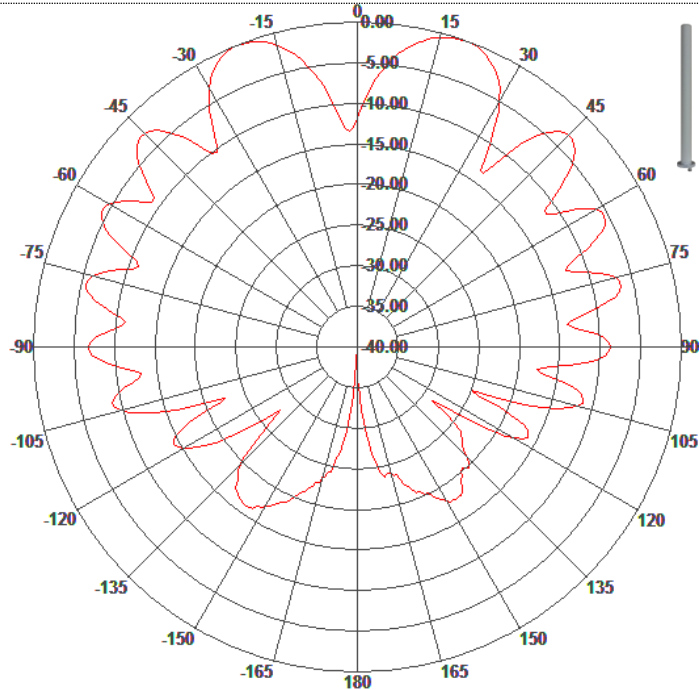


Radiations Patterns

Frequency 3600 MHz Gain, typ. 10 dBi

E-Plane Patterns

H-Plane Patterns

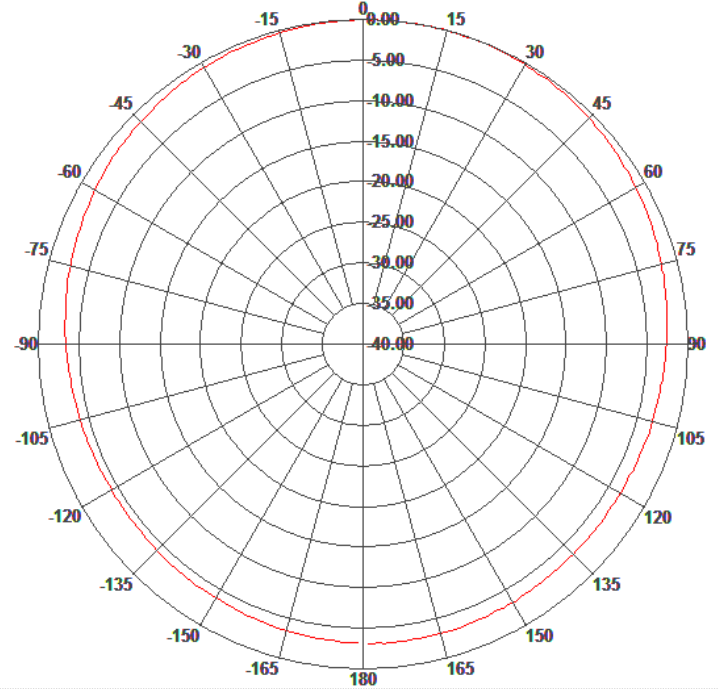
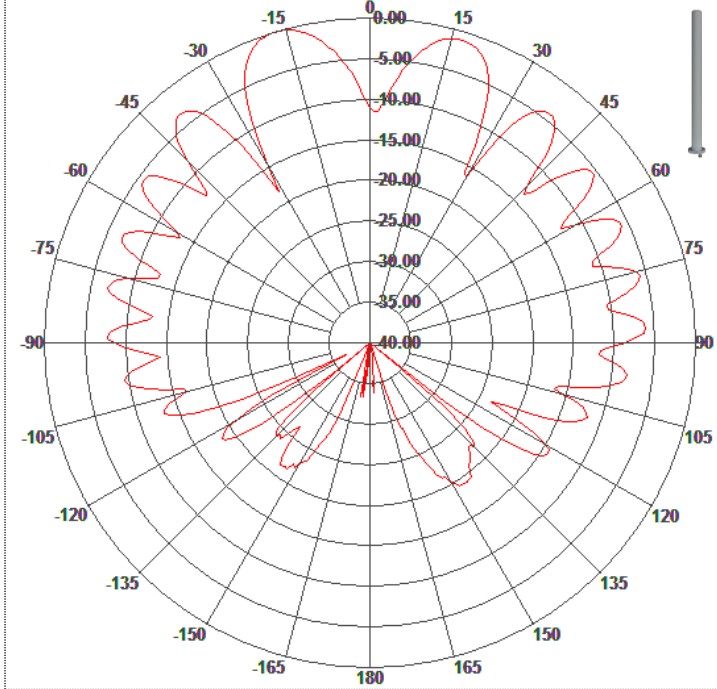


Radiations Patterns

Frequency 4100 MHz Gain, typ. 11 dBi

E-Plane Pattern

H-Plane Pattern

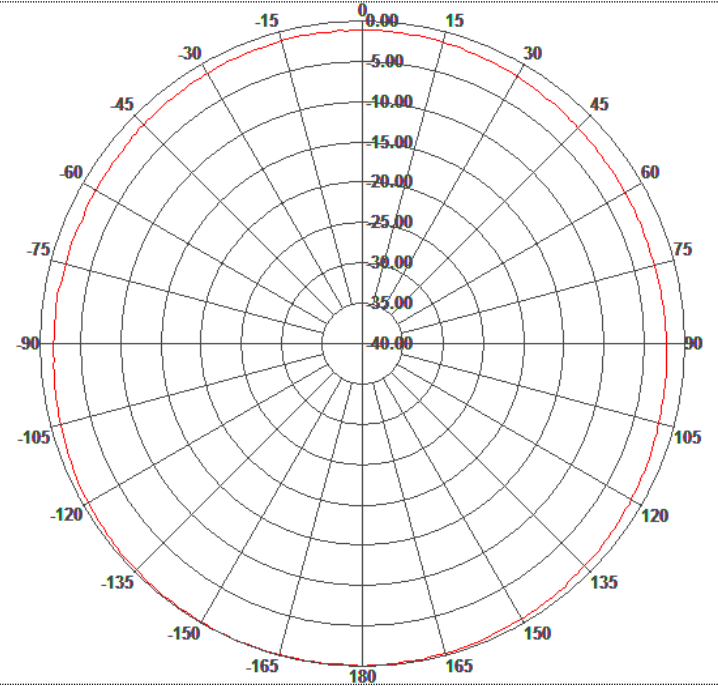
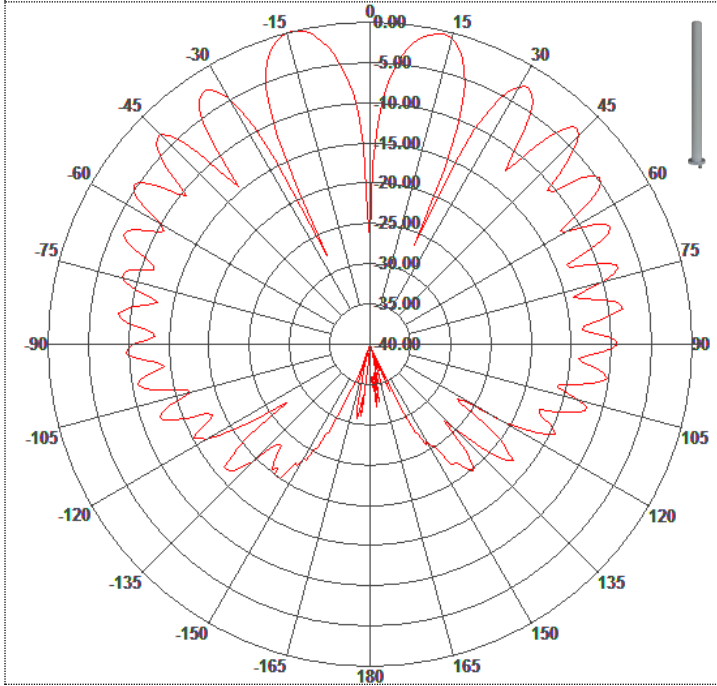


Radiations Patterns

Frequency 4900 MHz Gain, typ. 11 dBi

E-Plane Patterns

H-Plane Patterns

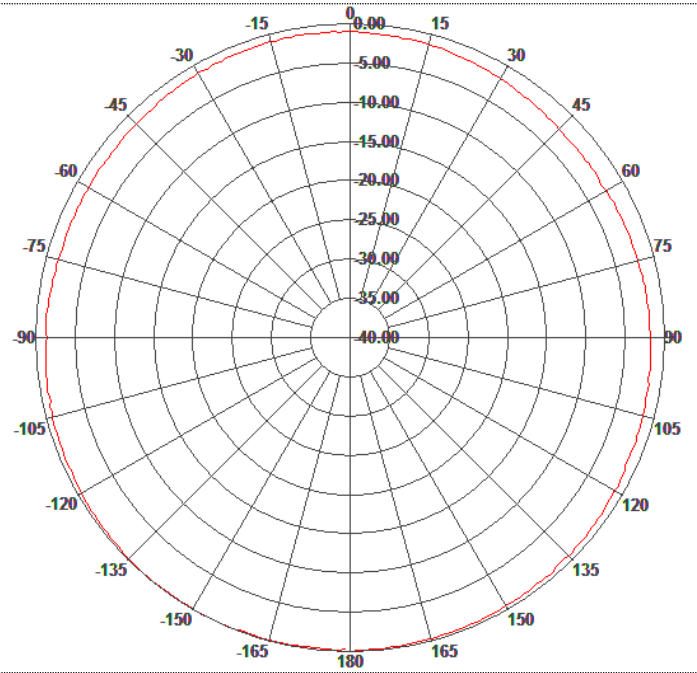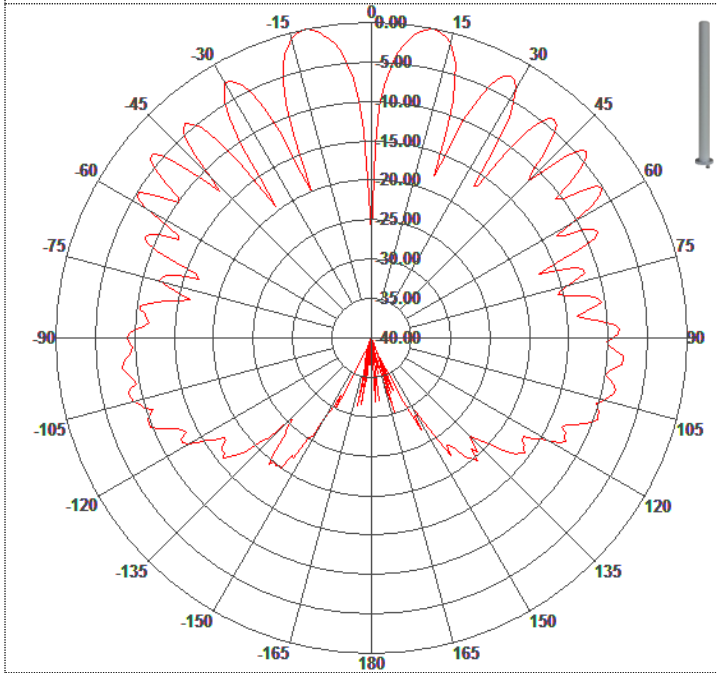

Radiations Patterns

Frequency 5500 MHz Gain, typ. 11 dBi

E-Plane Pattern

H-Plane Pattern

